

DIFFERENCE ELECTRICAL PARTS LIST

Main PWB(B1) section

(Refer to page 8,9 of the original service manual.)

The following parts are difference parts.

	PP-2449V-G		PP-2449V-I		PP-2449V-J	
C117	043-0277-51	0.022uF	043-0277-51	0.022uF	178-2232-78	0.022uF
C517	178-6822-78	6800pF	178-5632-78	0.056uF	178-3332-78	0.033uF
C518	178-4722-78	4700pF	178-4722-78	4700pF	043-0309-92	10V 0.68uF
C519	178-1232-78	0.012uF	178-1532-78	0.015uF	178-4732-78	0.047uF
C520	178-5622-78	5600pF	178-5622-78	5600pF	178-1042-78	0.1uF
C525	178-1232-78	0.012uF	178-1532-78	0.015uF	178-4732-78	0.047uF
C526	178-5622-78	5600pF	178-5622-78	5600pF	178-1042-78	0.1uF
C527	178-6822-78	6800pF	178-5632-78	0.056uF	178-3332-78	0.033uF
C528	178-4722-78	4700pF	178-4722-78	4700pF	043-0309-92	10V 0.68uF
C529	178-1242-78	0.12uF	178-1242-78	0.12uF	178-1842-78	0.18uF
C530 (Added part)	178-1242-78	0.12uF	178-1242-78	0.12uF	-----	Not used
C531	178-1042-78	0.1uF	178-1042-78	0.1uF	178-1842-78	0.18uF
C532	178-1042-78	0.1uF	178-1042-78	0.1uF	178-1842-78	0.18uF
C533	178-5632-78	0.056uF	178-5632-78	0.056uF	178-8232-78	0.082uF
C534 (Added part)	178-5632-78	0.056uF	178-5632-78	0.056uF	-----	Not used
C535	178-8232-78	0.082uF	178-8232-78	0.082uF	178-1242-78	0.12uF
C536	178-8232-78	0.082uF	178-8232-78	0.082uF	178-1242-78	0.12uF
C545	178-4732-78	0.047uF	178-6822-78	6800pF	178-8222-78	8200pF
C546	178-4732-78	0.047uF	178-6822-78	6800pF	178-8222-78	8200pF
C547	178-1242-78	0.12uF	178-1242-78	0.12uF	178-3332-78	0.033uF
C548	178-1242-78	0.12uF	178-1242-78	0.12uF	178-3332-78	0.033uF
C549	178-2232-78	0.022uF	178-2222-78	2200pF	178-4732-78	0.047uF
C550	178-2232-78	0.022uF	178-2222-78	2200pF	178-4732-78	0.047uF
C551	043-0309-92	10V 0.68uF	043-0309-92	10V 0.68uF	178-2232-78	0.022uF
C552	043-0309-92	10V 0.68uF	043-0309-92	10V 0.68uF	178-2232-78	0.022uF
C553	178-1042-78	0.1uF	178-8232-78	0.082uF	178-6832-78	0.068uF
C554	178-1042-78	0.1uF	178-8232-78	0.082uF	178-6832-78	0.068uF
C555	178-6832-78	0.068uF	178-6832-78	0.068uF	178-4732-78	0.047uF
C556	178-6832-78	0.068uF	178-6832-78	0.068uF	178-4732-78	0.047uF
C557	178-1042-78	0.1uF	178-8232-78	0.082uF	178-6832-78	0.068uF
C558	178-6832-78	0.068uF	178-6832-78	0.068uF	178-4732-78	0.047uF
C563	178-1042-78	0.1uF	178-8232-78	0.082uF	178-6832-78	0.068uF
C564	178-6832-78	0.068uF	178-6832-78	0.068uF	178-4732-78	0.047uF
C568	178-3932-78	0.039uF	178-2242-78	0.22uF	178-3932-78	0.039uF
C569	178-3932-78	0.039uF	178-2242-78	0.22uF	178-3932-78	0.039uF
C570	178-2242-78	0.22uF	178-3932-78	0.039uF	178-3932-78	0.039uF
C571	178-2242-78	0.22uF	178-3932-78	0.039uF	178-3932-78	0.039uF
R212	119-1031-15	1/10W 10k ohm	-----	Not used	119-1031-15	1/10W 10k ohm
R215 (Added part)	119-1031-15	1/10W 10k ohm	119-1031-15	1/10W 10k ohm	-----	Not used
R533	-----	Not used	-----	Not used	119-1221-15	1/10W 1.2k ohm
R534 (Added part)	119-4721-15	1/10W 4.7k ohm	119-4721-15	1/10W 4.7k ohm	-----	Not used
R535 (Added part)	119-2721-15	1/10W 2.7k ohm	119-8211-15	1/10W 820 ohm	-----	Not used
R536	-----	Not used	-----	Not used	119-1001-15	1/10W 10 ohm
R545 (Added part)	119-2721-15	1/10W 2.7k ohm	119-8211-15	1/10W 820 ohm	-----	Not used
R546	-----	Not used	-----	Not used	119-1001-15	1/10W 10 ohm
R547	-----	Not used	-----	Not used	119-2221-15	1/10W 2.2k ohm
R548 (Added part)	119-4721-15	1/10W 4.7k ohm	119-4721-15	1/10W 4.7k ohm	-----	Not used
R549	119-8211-15	1/10W 820 ohm	119-1221-15	1/10W 1.2k ohm	119-2221-15	1/10W 2.2k ohm
R550 (Added part)	119-8211-15	1/10W 820 ohm	119-1221-15	1/10W 1.2k ohm	-----	Not used
R551	119-3321-15	1/10W 3.3k ohm	119-3321-15	1/10W 3.3k ohm	119-2221-15	1/10W 2.2k ohm
R552	119-3321-15	1/10W 3.3k ohm	119-3321-15	1/10W 3.3k ohm	119-2221-15	1/10W 2.2k ohm
R554 (Added part)	119-1511-15	1/10W 150 ohm	119-1511-15	1/10W 150 ohm	-----	Not used
R569	119-2721-15	1/10W 2.7k ohm	119-8221-15	1/10W 8.2k ohm	119-1821-15	1/10W 1.8k ohm

	PP-2449V-G		PP-2449V-I		PP-2449V-J	
R570	119-2721-15	1/10W 2.7k ohm	119-8221-15	1/10W 8.2k ohm	119-1821-15	1/10W 1.8k ohm
R571	119-8211-15	1/10W 820 ohm	119-8211-15	1/10W 820 ohm	119-1521-15	1/10W 1.5k ohm
R572	119-8211-15	1/10W 820 ohm	119-8211-15	1/10W 820 ohm	119-1521-15	1/10W 1.5k ohm
R573	119-6831-15	1/10W 68k ohm	119-6831-15	1/10W 68k ohm	119-4731-15	1/10W 47k ohm
R574	119-6831-15	1/10W 68k ohm	119-6831-15	1/10W 68k ohm	119-4731-15	1/10W 47k ohm
R575	119-4721-15	1/10W 4.7k ohm	119-8221-15	1/10W 8.2k ohm	119-8221-15	1/10W 8.2k ohm
R586	119-4721-15	1/10W 4.7k ohm	119-8221-15	1/10W 8.2k ohm	119-8221-15	1/10W 8.2k ohm
R588	119-6831-15	1/10W 68k ohm	119-6831-15	1/10W 68k ohm	119-4731-15	1/10W 47k ohm
R589	119-6831-15	1/10W 68k ohm	119-6831-15	1/10W 68k ohm	119-4731-15	1/10W 47k ohm
R595	119-1031-15	1/10W 10k ohm	119-6821-15	1/10W 6.8k ohm	119-1031-15	1/10W 10k ohm
R596	119-1031-15	1/10W 10k ohm	119-6821-15	1/10W 6.8k ohm	119-1031-15	1/10W 10k ohm
R597	119-1831-15	1/10W 18k ohm	119-1031-15	1/10W 10k ohm	119-1031-15	1/10W 10k ohm
R598	119-1831-15	1/10W 18k ohm	119-1031-15	1/10W 10k ohm	119-1031-15	1/10W 10k ohm

Switch PWB(B2) section

(Refer to page 9 of the original service manual.)

The following part is the difference part.

REF No.	PART No.	DESCRIPTION
LCD1	379-1333-30	LCD


DIFFERENCE CIRCUIT DIAGRAM

Main PWB(B1) section 1/2

(Refer to page 12 of the original service manual.)

: Difference part according to model
Refer to "DIFFERENCE ELECTRICAL PARTS LIST" .

: Added part with original model
Refer to "DIFFERENCE ELECTRICAL PARTS LIST" for the difference according to the model.

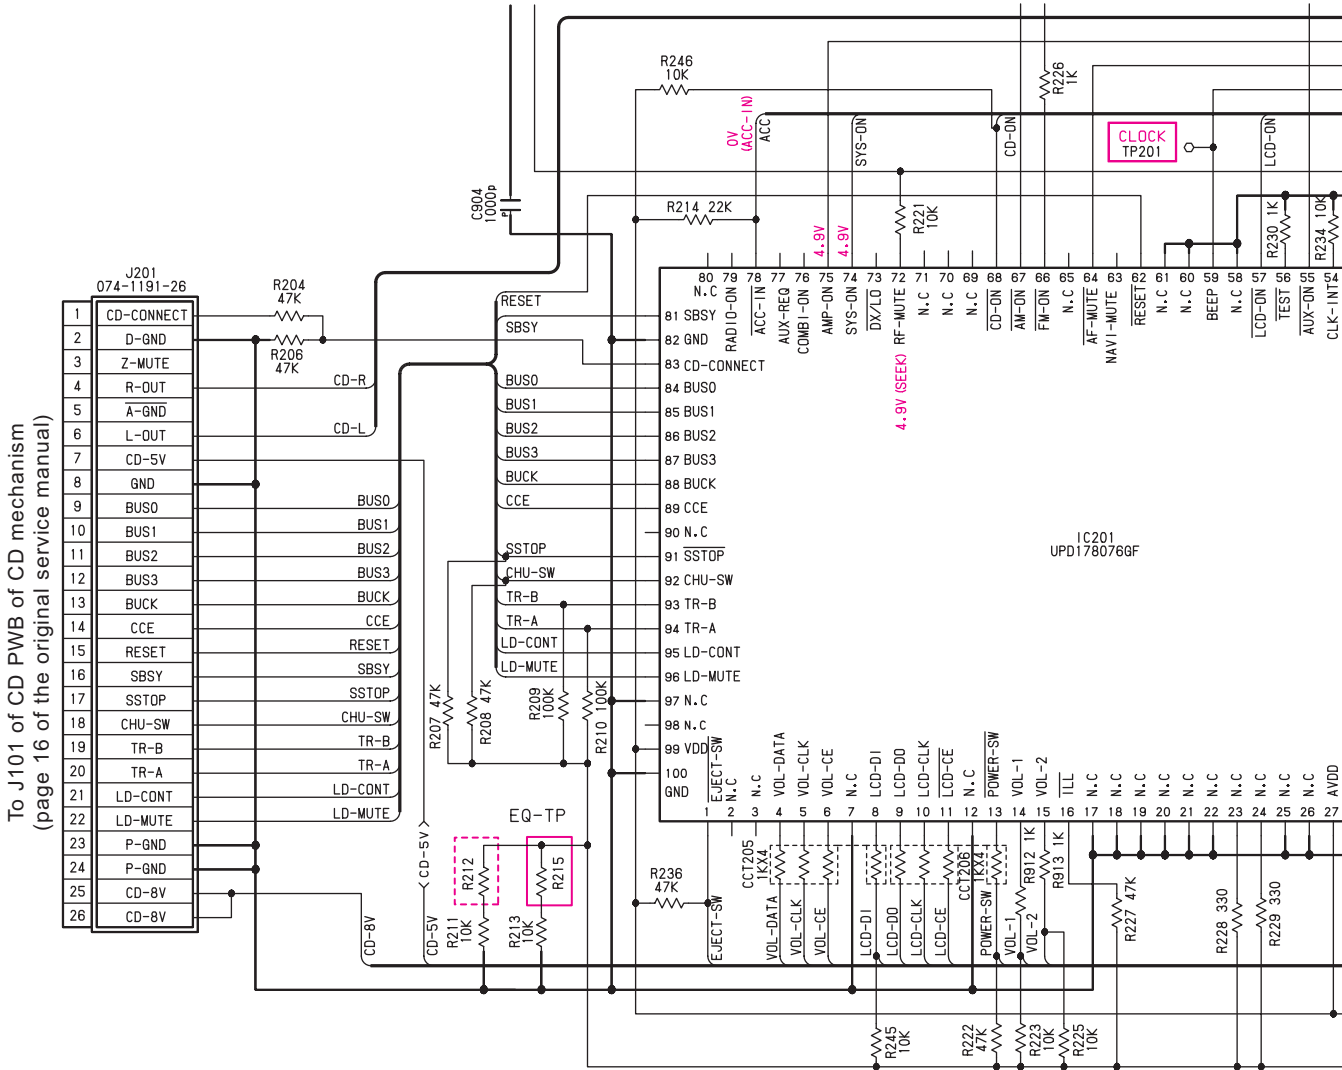


Main PWB(B1) section 2/2

(Refer to page 13 of the original service manual.)

 : Difference parts according to model
Refer to "DIFFERENCE ELECTRICAL PARTS LIST" of page2.

 : Added parts with original model
Refer to "DIFFERENCE ELECTRICAL PARTS LIST" of page2 for the difference according to the model.

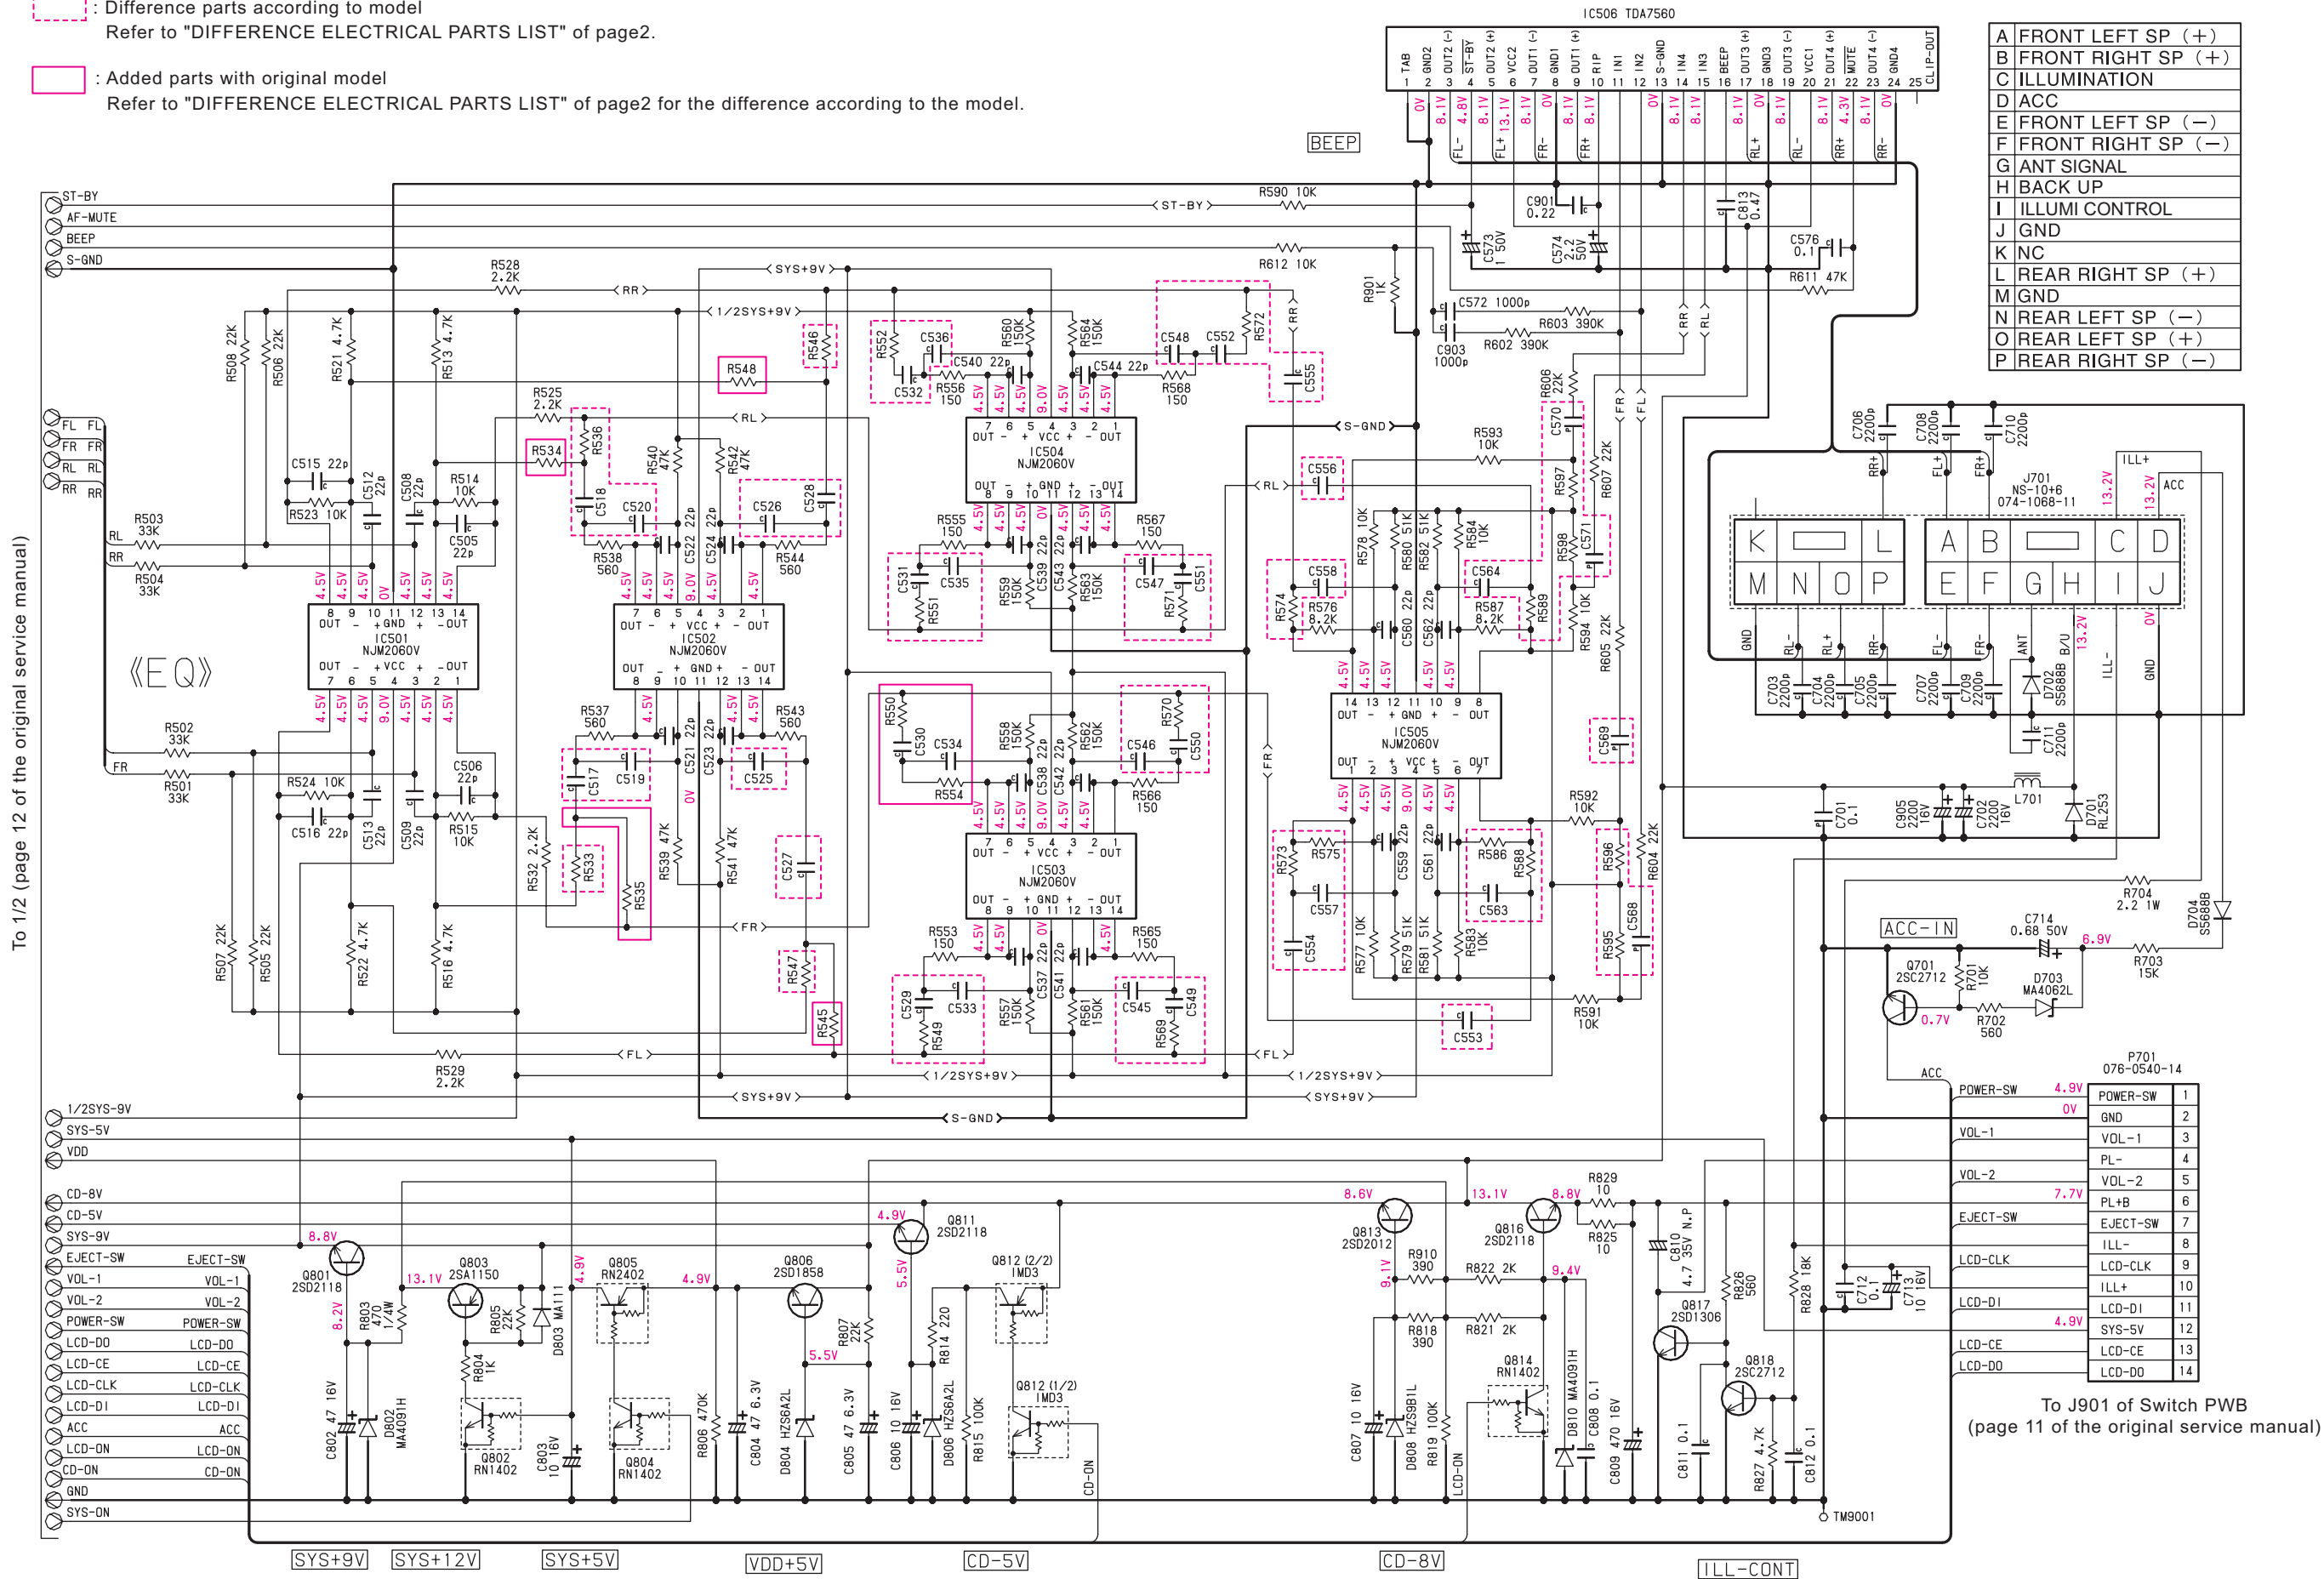


DIFFERENCE PRINTED WIRING BOARD

Main PWB(B1) section : COMPONENT SIDE


(Refer to page 14 of the original service manual.)

 : Added parts with original model

A	FRONT LEFT SP (+)	I	ILLUMI CONTROL
B	FRONT RIGHT SP (+)	J	GND
C	ILLUMINATION	K	NC
D	ACC	L	REAR RIGHT SP (+)
E	FRONT LEFT SP (-)	M	GND
F	FRONT RIGHT SP (-)	N	REAR LEFT SP (-)
G	ANT SIGNAL	O	REAR LEFT SP (+)
H	BACK UP	P	REAR RIGHT SP (-)

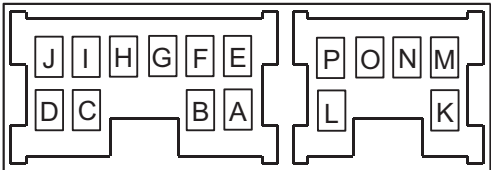

COMPONENT SIDE

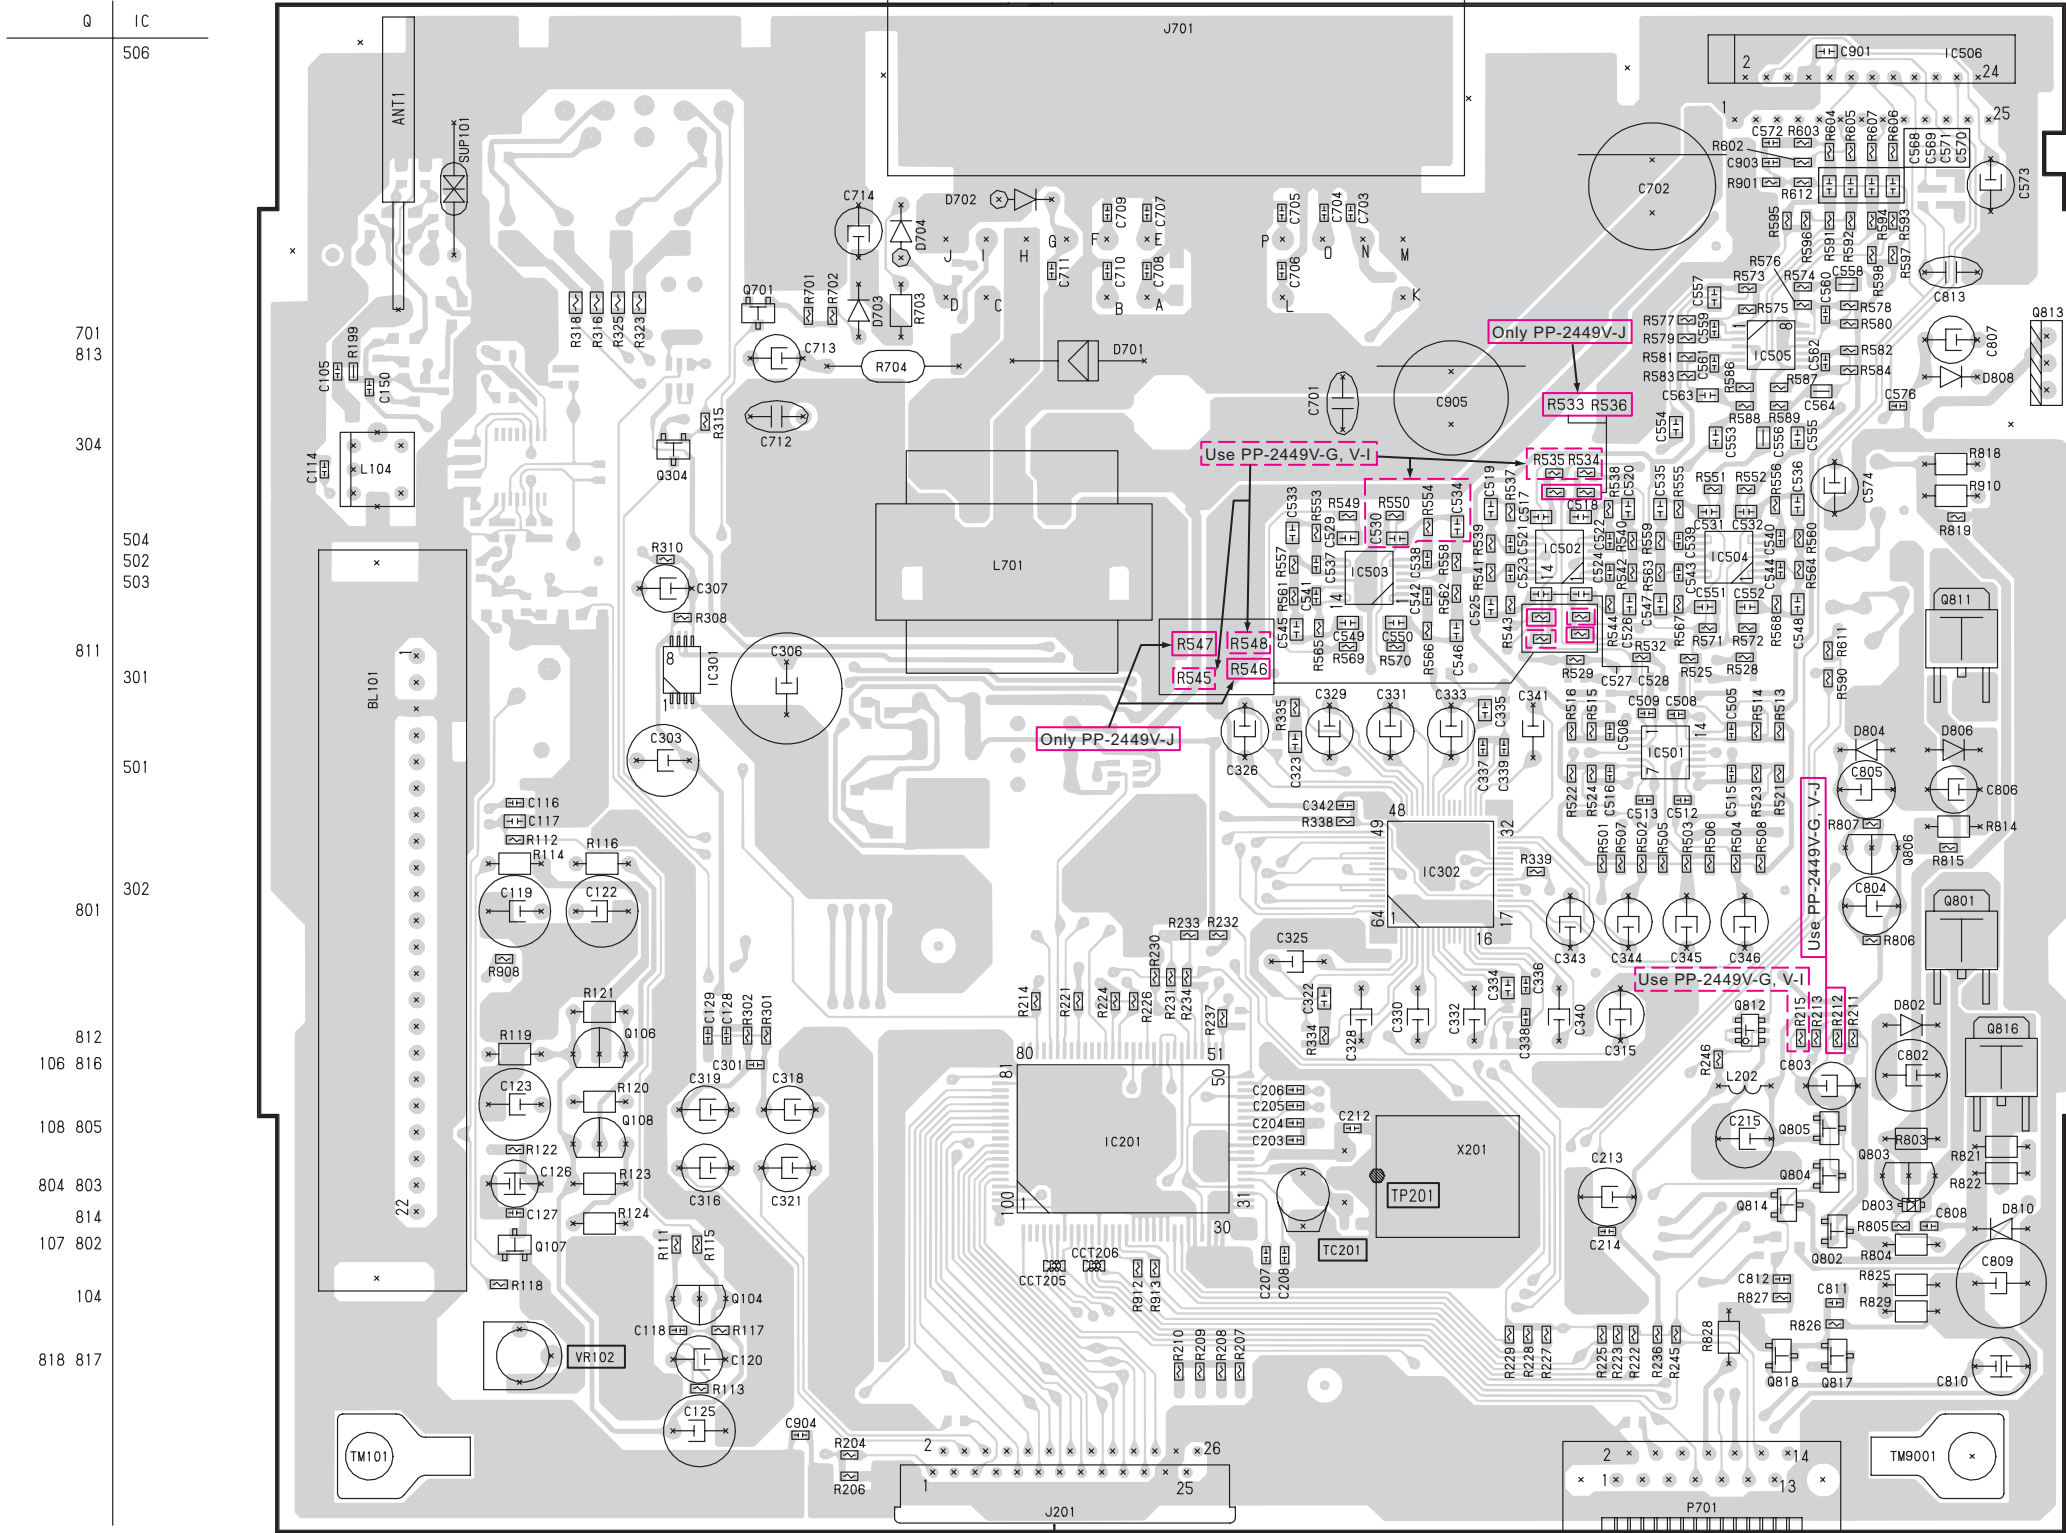

To J101 of CD PWB
of CD mechanism
(page 16 of the original service manual)

To J901 of Switch PWB
(page 11 of the original service manual)

MAIN PWB (B1)